

**DVR (except DVR-RT400 and DVR-RT501):**

You can reset all models of DVR by the following method:

- 1 Make sure that the recorder is **on** and that the disc tray is empty.
- 2 Using the front panel controls, press and hold **STOP** and press **STANDBY/ON**.

The recorder turns off with all settings reset.

-----

**DVD Players**

You can reset all models of DVD Players with the following method:

- 1 Switch the player into **standby** and empty the disc tray.
- 2 Using the front panel buttons, hold down the **STOP** button and press **STANDBY/ON** to switch the player back on.

All the player's settings are now reset, and you should see the 'Let's Get Started' screen.